

151 VR **SPECIFICATIONS**

Overall System Performance

Frequency Response	25 - 20,000 Hz \pm 3 dB
Dynamic Range	120 dB (max SPL to A-weighted noise level)
Harmonic Distortion	< 0.3%
RF Carrier Frequency	One of four standard channels in the VHF high band
Frequency Stability	\pm .005%, crystal controlled
Modulation	FM, \pm 15 KHz
Operating Range	up to 250 feet (depending on site conditions)

151 VR Receiver

Controls	Headphone volume controls with unit OFF/ON switch, Mute adjust, Audio output level adjust
Audio output	600 ohm unbalanced
Connectors	Audio output; 3.5 mm mini jack; Headset output; 3.5 mm mini jack
LED Indicators	"TX" on; "LOW BATT": unit "ON" (single flash), Low Battery Alert (steady)
Mute	Externally adjustable; 1 μ V preset minimum
Unwanted Signal Rejection60 dB image and spurious
Power Requirements	Single 9V alkaline, internal
Antenna	Attached Software

WLT-15 Lavalier Bodypack Transmitter

Audio Input	3.5 mm mono locking jack for connecting to omni or unidirectional lavalier mic or unidirectional head worn mic, with phantom power.
Controls.....	OFF/STANDBY/ON switch, input level adjust
LED Indicators	Unit "ON" (single flash), Low Battery Alert (steady)
RF Power Out50 mW (maximum allowed by FCC)
Harmonic and Spurious Emissions	> -40 dB
Battery	9V alkaline
Battery Life	Up to 15 hours

WHT-15 Handheld Microphone Transmitter

Audio Input	Nady DM-10D neodymium dynamic cartridge
Controls	OFF/STANDBY/ON switch
LED Indicators	Unit "ON" (single flash), Low Battery Alert (steady)
RF Power Out50 mW (maximum allowed by FCC)
Harmonic and Spurious Emissions	< -40 dB
Battery	9V alkaline

Service for your Nady Wireless System

(U.S.) Should your wireless system require service, please contact the Nady Service Department via telephone at (510) 652-2411 or e-mail to service@nadywireless.com for a Return Authorization (R/A) Number and a service quote (if out of warranty). Make sure the R/A Number is clearly marked on the outside of the package and enclose a cashier's check or money order (if not prepaid with a credit card). Ship the unit prepaid to: Nady Systems, Inc., Service Department, 6701 Shellmound Street, Emeryville, CA 94608. Include a brief description of the problem you are experiencing.

The warranty card enclosed with this system contains additional valuable warranty and service information. Keep it in a safe place for possible future reference. Do not attempt to service this unit yourself as it will void the warranty.

(International) For service, please contact the Nady distributor in your country through the dealer from whom you purchased this product.